

ALPHABETICAL INDEX

- A**
- Adaptor, Hydraulic, 247, 249 to 250
 - Adaptor, PTO Shaft, 210
 - Air Cleaner, 157 to 158
 - Bowl, 157
 - Door, 273
 - Gasket, 159
 - Hose, 159
 - Spring, 158
 - Tube, 158
 - Air Conditioning Compressors, 282
 - Air Filter, 158
 - Air Intake
 - Funnel, 159, 273
 - Jar, 157
 - Alternator, 185 to 187
 - Bracket, Adjusting, 185 to 186
 - Bracket, Base, 185 to 186
 - Bracket, Top, 185
 - Conversion Kit, 185 to 186
 - Pulley, 184, 186 to 187
 - Repair Kit, 188
 - Tach Drive, 186
 - Wiring Harness, 185 to 186
 - Ammeter, 188
 - Anchor Pins, 234
 - Anchor, Drawbar, 235
 - Anti-Rattler, Fuel Line, 155
 - Arm
 - Drawbar Stay, 235
 - Lower Lift, 230
 - Stabilizer, 233
 - Steering, 211
 - Three Point Lift, 230
 - Axle
 - Axle, Front, 219
 - Axle, Rear, 204
 - Bearing, Front Spindle Thrust, 223
 - Bearings, Front, 224
 - Bearings, Rear Axle, 204
 - Bolt Kit, Front Axle Mount, 218
 - Bolt, Radius Rod, 219
 - Bushing Kit, Front Spindle, 223
 - Bushing, Front Pivot, 218
 - Bushing, Front Spindle, 223
 - Collar, 204
 - Gasket, 203, 205
 - Gasket, Housing, 205
 - Hub, 224 to 225, 243, 245
 - Kit, Nut and Snap Ring, 204
 - Knee, Front, 219
 - Nut, Rear, 204
 - Pin, Front Pivot, 218
 - Pin, Radius Rod, 218
 - Seal, Rear, 204 to 205
 - Axle (continued)
 - Seals, 204 to 205
 - Seals, Front, 225
 - Snap Ring, Rear, 204
 - Spacer, Front Support Pin, 218
 - Spindle, Front, 223
 - Tie Rod Ends, Front, 221
 - Washer, Front Axle, 226
 - Washer, Rear Axle, 204
- B**
- Backrest, 282
 - Backrest Cover, 282
 - Bail, Air Intake, 157
 - Bail, Fuel Sediment Bowl, 154
 - Bale Counter, 267
 - Baler Parts
 - Counter, Bale, 267
 - Ball
 - Governor, 153
 - Lift Arm, 230 to 232
 - Top Link, 232
 - Transmission Shifter, 199
 - Battery
 - Box, 183
 - Cable, 183
 - Hold Down, 183
 - Latch, Door, 273
 - Strap, Ground, 183
 - Bearings
 - Axle, Rear, 204
 - Blade Shaft, Rotary Cutter, 266
 - Camshaft, Engine, 144
 - Clutch, Pilot, 198
 - Clutch, Release, 199
 - Disc, 270
 - Disc Harrow, 269
 - Engine, 60 to 61
 - Flail Mower, 269
 - Flanges, 266, 269
 - Generator, 184
 - Governor, 153
 - Housing, Main Drive, 265
 - Idler, Water Pump, 163
 - Kit, Implement Wheel, 269
 - Mower, 270
 - Mower Drive, Flail, 266
 - Pinion, Differential, 202
 - Planter, 269
 - PTO Shaft, 206 to 207
 - Pump, Hydraulic, 238
 - Shaft, Hydraulic Pump, 238
 - Steering Sector, 212
 - Tapered Cups & Cones, 224, 238, 270
 - Thrust, Leveling Box, 228

Bearings (continued)

Thrust, Spindle, 223
 Thrust, Steering Gear, 214
 Transmission, 200, 202
 Wheel, Front, 224

Belts

Alternator, 162, 185 to 186
 Fan, 162, 185 to 186
 Generator, 162, 185 to 186
 Mower, 265 to 266

Blade, Flail, 266 to 267

Blade, Rotary Cutter, 266

Block Heater, 167

Block, Hydraulic Pump Cam, 237

Board, Running, 271

Bolt

Bracket, Fender, 278
 Bumper, 271
 Clamp, Drag Link, 220
 Connecting Rod, Engine, 141
 Cover, Battery, 183
 Door, Air Cleaner, 159
 Gear, Differential Ring, 203
 Gear, Starter Ring, 203
 Guard, 264, 279
 Guard, Sickle, 279
 Handle, Hydraulic Valve, 249 to 250
 Hood, 273
 Instrument Panel, 193
 Kit, Front Axle, 218
 Muffler, 169
 Plate, Hydraulic Adaptor, 249 to 250
 Radius Rod, 219
 Rim, Rear, 226
 Running Board, 271
 Sickle Guard, 264
 Tail Light, 191
 Wheel, Rear, 226

Boot, Starter, 189

Boot, Transmission Gear Shift, 199

Bowl, Air Cleaner, 157

Bowls, Fuel, 154

Box

Battery, 183
 Mount, Hydraulic Valve, 253, 255 to 257
 Tool, 271

Bracket

Bumper, 271
 Coupler, Hydraulic Hose, 248
 Emblem, 275
 Fender, 278
 Handle, Valve, 258
 Mount, Hydraulic Pump, 242
 Running Board, 271
 Stabilizer, 233
 Stabilizer, Three Point, 235

Brakes

Band, 210

Brakes (continued)

Bushing, Pedal Shaft, 195
 Cover, Camshaft, 195
 Discs, 194, 209
 Drum, 195
 Kit, Repair, 194
 Lining, Shoe, 194
 Seal, Pedal, 194
 Seal, Rod, 195
 Shoes, 194
 Spring, 195
 Stud, Support Plate, 195

Brush, Generator, 182, 184

Bulb, Light, 189, 191

Bumper

Bracket, 271
 Front, 271
 Hood, Rubber, 273 to 274
 Spring, Seat, 283

Bushing

Adaptor, Link Pin, 230, 232
 Column, Steering, 212 to 213
 Hydraulic Pump, 237
 Oil Pump, 145
 Pivot, Front Axle, 218
 Reducing, Lift Arm Pin, 230
 Sector, Steering Gear, 212
 Shaft, Brake Pedal, 195
 Shaft, Carburetor Throttle, 150
 Shaft, Clutch Pedal, 195
 Shaft, Distributor, 176
 Shaft, Steering Gear Pitman, 212
 Shaft, Steering Gear Rocker, 214
 Shaft, Three Point Lift, 239
 Spindle, 223
 Starter, 184
 Top Link, 232

Butterfly, Carburetor, 152

Butterfly, Carburetor Choke, 152

C

Cable, Battery, 183
 Cable, Tachometer, 161 to 162
 Cam & Weight, Distributor, 176 to 177
 Camshaft, 144

Cap

Air Intake, 158
 Distributor, 175 to 177
 Fuel Tank, 155
 Hub, 225
 Oil Filler, 160
 Power Steering, 216
 Radiator, 166
 Steering Wheel, 211, 213

Capscrew, Hydraulic Valve Handle Mounting, 249 to 250

Carburetor

Bushing, Throttle Shaft, 150
 Butterfly, Choke, 152

Carburetor (continued)

- Elbow, Inlet, 152
- Float, 152
- Gasket, 151
- Jet, 152
- Kits, 149 to 151
- Needle Valve, 152
- Nozzle, 152
- Retainer, Throttle Shaft Seal, 152
- Rod, Choke Control, 151
- Seal, Throttle Shaft, 152
- Shaft, Choke, 152
- Shaft, Throttle, 152
- Spring, Choke Poppet Valve, 152
- Spring, Choke Return, 152
- Spring, Nozzle, 152

Carburetors, 149 to 150

Chain, Drawbar Anchor, 235

Clamp

- Air Cleaner, 159, 167
- Coupler, Hydraulic, 247 to 248, 253
- Exhaust, 169, 173
- Hose, 167
- Wheel, Rear, 227

Clevis, Swinging Drawbar, 236

Clip

- Pin, Drawbar, 236
- Radiator Grill, 272
- Spring, Distributor Rotor, 176 to 177
- Spring, Seat, 283
- Terminal, 193

Closed Center Plug, Hydraulic Valve, 258

Clutch

- Bearing, Pilot, 198, 266
- Bearing, Release, 199, 266
- Bushing, Pedal Shaft, 195
- Cover, 196
- Disc, 194, 197
- Disc, PTO, 197, 209
- Disc, Slip Clutch, 266
- Facing, 266
- Kits, Complete, 195
- Plate, Friction, 209
- Plate, PTO, 207, 209
- Pressure Plate, 196 to 197
- Ring, PTO Piston, 210
- Slip, 266

Coil Resistor, 176, 178, 185

Coil, Ignition, 175 to 176, 185

Collar, Axle, 204

Collar, PTO Shaft Seal Retaining, 205

Combine Parts

- Blades, Sickle, 262
- Guards, Sickle, 262
- Knives, Sickle, 262
- Rivet, Sickle, 263
- Section, Sickle, 262

Compressor, Air Conditioning, 282

Condenser, Distributor, 175 to 177

Cooling Systems

- Bearing, Idler, 163
- Caps, Radiator, 166
- Clamp, Hose, 167
- Drain, Radiator, 166
- Fan Blade, 164
- Hoses, 167
- Kits, Water Pump, 163
- Pad, Radiator Hood, 166
- Radiators, 165
- Shroud, Fan, 164
- Temperature Sending Unit, 189
- Thermostats, 166, 189
- Water Pumps, 163

Counter, Bale, 267

Countershaft, Transmission, 199

Coupler

- Adaptor, Hydraulic, 247
- Clamp, Hydraulic, 247 to 248, 253
- Drive, Hydraulic Pump, 241, 243
- Hydraulic, 247, 253
- Hydraulic, Female, 248
- Hydraulic, Male, 247
- Shaft, Hydraulic Pump, 244

Cover

- Backrest, 282
- Brake Camshaft, 195
- Cushion, Seat, 282 to 283
- Dust, Distributor, 175, 177
- Dust, Hydraulic Coupler, 248
- Dust, Steering Drag Link, 220
- Pitman Bearing, 264 to 265
- PTO, 206
- Terminal, Starter Solenoid, 189
- Transmission, 200

Crankshaft, 143

Cross and Bearing Kit, 266 to 267

Cultivator Washer, 269

Cushion, Seat, 282 to 283

Cut-out, Generator, 183

Cylinder

- Hydraulic, 246
- Power Steering, 214
- Side Link, 255 to 256, 259 to 260
- Steering, 214
- Top Link, 255 to 256, 261

D

Data Plate, 271

Data Plate Screw, 271

Decals, 275

Detent, Hydraulic Valve, 258

Differential

- Bearing, Pinion Shaft, 202
- Bolt, Ring Gear, 203
- Gaskets, 201, 203
- Gear, Spider, 202 to 203

Differential (continued)

- Nut, Differential Lock, 202
- Nut, Ring Gear, 203
- Pinion, 202
- Washer, Spider Gear Thrust, 202 to 203

Dipstick, Engine Oil, 160

Dipstick, Hydraulic Oil, 160

Disc

- Bearings, 269
- Brake, 194, 209
- Clutch, 194, 197
- Clutch, Slip, 266
- PTO Clutch, 197, 209
- Rear Wheel, 227

Distributor, 176 to 177

- Base, 176
- Bushing, Shaft, 176
- Cap, 175 to 177
- Clip, Rotor Spring, 176 to 177
- Coil, 175, 185
- Cover, Dust, 175, 177
- Gasket, 176, 178
- Plate, Breaker, 176 to 177
- Resistor, 176, 178, 185
- Rotor, 175 to 177
- Shaft, 177

Distributor Coil, 176

Distributor

- Base, 176
- Bushing, Shaft, 176
- Cap, 175 to 177
- Clip, Rotor Spring, 176 to 177
- Coil, 175, 185
- Cover, Dust, 175, 177
- Gasket, 176, 178
- Plate, Breaker, 176 to 177
- Resistor, 176, 178, 185
- Rotor, 175 to 177
- Shaft, 177

Door, Air Cleaner, 159, 273

Door, Battery, 273

Drag Link, 219

Drag Link Ends, 219, 221

Drain

- Cock, Radiator, 166
- Plug, Engine Oil, 161
- Plug, Transmission, 201

Drawbar, 236

- Anchor, 235
- Chain, Anchor, 235
- Clevis, Swinging, 236
- Clip, Clevis Pin, 236
- Hanger, 236
- Pin, 231, 236
- Pin, Clevis, 236
- Stay Arm, 235
- Three Point, 235 to 236

Drum, Brake, 195

Dust Cover, Drag Link, 220

E

Elbow, Exhaust, 169

Electrical

- Alternator Conversion Kit, 185 to 186
- Alternators, 185 to 187
- Ammeter, 161, 188
- Base, Distributor, 176
- Bolt, Battery Cover, 183
- Bolt, Tail Light, 191
- Boot, Starter Switch, 189
- Bracket, Alternator Adjusting, 185 to 186
- Bracket, Alternator Base, 186
- Bracket, Base Alternator, 185 to 186
- Bracket, Light, 179, 191 to 192
- Bracket, Top Alternator, 185
- Brush, Generator, 182, 184
- Bulb, Light, 189, 191
- Bushing, Distributor Shaft, 176
- Bushing, Starter, 184
- Cables, Battery, 183
- Cables, Ground Strap, 183
- Cam & Weight, Distributor, 176 to 177
- Cap, Distributor, 175 to 177
- Clip, Distributor Rotor Spring, 176 to 177
- Clip, Light, 192
- Clip, Light Rim Retainer, 192
- Clip, Terminal, 193
- Coils, Ignition, 175 to 176, 185
- Condenser, 175 to 177
- Cover, Cable, 189
- Cover, Distributor Dust, 175, 177
- Cut-out, Generator, 183
- Distributor, 176 to 177
- Drive, Alternator Tach, 186
- Drive, Starters, 182
- Electronic Ignition Kit, 174
- Flasher, Light, 192
- Gasket, Distributor, 176, 178
- Gasket, Starter Switch, 180
- Gauge, Voltmeter, 188
- Generator, 184
- Grommet, Wire, 189
- Harness, Wiring, 179
- Heater, Engine, 167
- Hold Down, Battery, 183
- Key, Ignition Switch, 178
- Kit, Alternator Conversion, 185 to 186
- Kit, Alternator Repair, 188
- Kit, Generator Repair, 184
- Kit, Starter Repair, 182
- Kit, Tune-up, 174, 176
- Knob, Switch, 179
- Lens, Light, 192
- Light, Warning, 192
- Lighter, Cigar, 192
- Lights, 189, 191 to 192

Electrical (continued)

Nut, Switch, 178 to 179
 Plate, Distributor Breaker, 176 to 177
 Points, 175 to 177
 Pulley, Alternator, 184, 186 to 187
 Regulator, Voltage, 183 to 186, 188 to 189
 Resistor, Distributor, 176, 178, 185
 Retainer, Spark Plug Wire, 179
 Rim, Light, 192
 Rim, Light Bulb Retainer, 189, 192
 Rotor, Distributor, 175 to 177
 Shaft, Distributor, 177
 Solenoid, Starter, 181
 Spacer, Light Bracket, 192
 Spark Plugs, 175
 Starter Drive, 182
 Starters, 180
 Switch, Ignition, 178 to 180
 Switch, Light, 178 to 180
 Switch, Safety, 180
 Switch, Starter, 180
 Tach Drive, Generator, 184
 Tail Light, 191
 Thermostart, 167
 Voltmeter, 188
 Wire Harness, 179, 185
 Wires, Spark Plug, 179
 Wiring Harness, Alternator, 185 to 186

Emblem Bracket, 275

Emblem, Hood, 275

End, Lift Arm Repair, 231

Engines

Ball, Governor, 153
 Bearing, Camshaft, 144
 Bearing, Connecting Rod, 60 to 61
 Bearing, Main, 60 to 61
 Belts, 162, 185 to 186
 Bolt, Connecting Rod, 141
 Bushing, Crankshaft Pulley, 141
 Bushing, Oil Pump, 145
 Camshafts, 144
 Caps, Air Intake, 158
 Caps, Fuel Tank, 155
 Caps, Oil Filler, 160
 Caps, Radiator, 166
 Clamps, Mufflers, 169, 173
 Crankshaft, 143
 Elbow, Exhaust, 169
 Fan, Cooling, 164
 Filters, Air, 157 to 158
 Filters, Fuel, 154, 156
 Filters, Housing, Dual Fuel, 156
 Filters, Oil, 159 to 160
 Flange, Oil Filter Conversion, 160
 Gasket, Rear Seal Retainer, 144
 Gaskets, 62 to 64, 161
 Gaskets, Plug, Oil Pan, 161
 Gaskets, Water Pump, 163

Engines (continued)

Gauge, Oil Pressure, 189
 Gauge, Tachometer, 161, 188
 Gauge, Water Temperature, 189
 Gear, Camshaft, 144
 Gear, Crankshaft, 144
 Gear, Oil Pump, 145, 147, 238
 Governor, 153
 Governor Parts, 151 to 153, 176
 Head, Cylinder, 148
 Heater, Block, 167
 Heater, Thermostart, 167
 Kit, See page XVI to IXX for complete application listing, 1 to 51, 65 to 140
 Kits, Governor, 153
 Manifolds, 168
 Mufflers, 169 to 170
 Nut, Connecting Rod, 141
 Oil Level Indicator, 160
 Oil Pumps, 146 to 147
 Pipe, Exhaust, 170, 172 to 173
 Piston, 1939 to 1964, 55
 Plug, Oil Drain, 161
 Plug, Oil Pan, 161
 Pulley, Crankshaft, 141, 245
 Pumps, Water, 163
 Pumps, Water, Repair Kit, 163
 Push Rod, 142
 Reamer, Oil Pump Repair, 144
 Rings, Piston, 1939 to 1964, 56
 Rocker Arm, 142
 Seal, Front Crankshaft, 143
 Shaft, Governor, 153
 Shaft, Oil Pump, 147
 Sleeve & Piston Assembly 1939 to 1964, 52 to 53
 Sleeves, 1939 to 1964, 54
 Spring, Governor, 151, 153
 Tappet, Valve, 143
 Thermostat, 166
 Tool, Oil Pump Repair, 144
 Tube, Oil Level Indicator, 161
 Valve Kit, 59
 Valve, Exhaust, 58
 Valve, Intake, 58
 Valve, Rotating Conversion Kit, 58

Exhaust System

Bolt, Muffler, 169
 Caps, Rain, 173
 Clamps, 169, 173
 Elbow, 169
 Gasket, Muffler, 168 to 169
 Manifolds, 168
 Mufflers, 169 to 170
 Nut, Manifold, 167
 Nut, Muffler, 167, 169
 Pipe, Extension, 170, 172 to 173
 Rain Caps, 173
 Washer, Lock, Muffler, 169, 279

Eyebolt, Sway Chain, 235
Eyelet, Lift Arm Sway Chain, 235

F

Facing, Clutch, 266
Fan

Belt, 162
Cooling, 164
Shroud, 164

Fender, 278

Fender Bracket, 278

Filters

Air, 157 to 158
Bail, Air Intake, 157
Bowl, Fuel, 158
Clamp, Air Cleaner, 159, 167
Door, Air Cleaner, 159, 273
Flange, Oil Filter Conversion, 160
Fuel, 154, 156
Funnel, Air Intake, 159, 273
Gasket, Air Cleaner, 159
Gasket, Jar Air Intake, 157
Housing, Dual Fuel, 156
Jar, Air Intake, 157
Oil, Engine, 159 to 160
Power Steering, 216
Screen, Fuel, 159, 273
Screw, Air Intake Funnel, 159
Seal, Air Cleaner, 158
Spring, Air Cleaner, 158
Tube, Air Cleaner, 158

Fitting, Banjo Bolt Hose, 249 to 250

Fitting, Grease, 264

Flail Blade, 266 to 267

Flail Mower Drive Bearing, 266

Flange, Hydraulic Pump Drive, 243

Flange, Oil Filter Conversion, 160

Flangettes, Bearing, 266, 269

Flasher, Light, 192

Float, Carburetor, 152

Flywheel Ring Gear, 182

Fork, Leveling Shaft, Three Point, 229

Fork, Three Point Leveling, 229

Fuel Gauge, 189

Fuel Systems

Bail, Fuel Sediment Bowl, 154
Bowl, Filter, 154, 158
Bushing, Carburetor Throttle Shaft, 150
Butterfly, Carburetor, 152
Butterfly, Choke, 152
Cap, Air Intake, 158
Cap, Fuel Tank, 155
Carburetors, 149 to 150
Filter Head, 156
Filter, Air, 157 to 158
Filter, Fuel, 154, 156
Float, Carburetor, 152
Gasket, Carburetor, 151 to 152

Fuel Systems (continued)

Gasket, Fuel Tank Sending Unit, 155
Gasket, Sediment Bowl, 151, 154
Gauge, 189
Head, Dual Filter, 156
Jet, Carburetor, 152
Kit, Carburetor, 149 to 151
Knob, Choke, 151
Line Anti-Rattler, Fuel, 155
Line, Fuel, 155
Needle & Seat, 150
Needle, Carburetor, 152
Nozzle, Carburetor, 152
Nozzle, Injector, 157
Pumps, Lift, 156
Retainer, Carburetor Seal, 152
Rod, Choke, 151
Screen, Sediment, 154, 159, 273
Seal Kit, Injector, 157
Seal, Carburetor Throttle Shaft, 152
Sediment Bowl Assembly, 154
Sending Unit, Fuel Tank, 155
Shaft, Carburetor, 152
Shaft, Carburetor Choke, 152
Shaft, Carburetor Throttle, 152
Shut-Off, Fuel, 154 to 155
Shut-Off, Tank, 154
Solenoid, Shut-Off, 156
Spring, Carburetor Choke Poppet Valve, 152
Spring, Carburetor Choke Return, 152
Spring, Carburetor Nozzle, 152
Strainer, Carburetor Inlet, 152
Tank, Fuel, 155
Valve, Float, 150
Valve, Shut-off, 154
Valve, Tank Shut-off, 154 to 155
Venturi, Carburetor, 152
Washer, Carburetor, 151
Funnel, Air Intake, 159, 273

G

Gas Line, 155

Gas Tank, 155

Gasket, Fuel Bowl, 151, 154

Gaskets

Air Cleaner, 159
Air Intake Jar, 157
Axle, 203, 205
Carburetor, 151 to 152
Cylinder, Hydraulic Lift, 241
Differential, 201, 203
Distributor, 176, 178
Exhaust, 168
Fuel Tank Sending Unit, 155
Housing, Axle, 205
Hydraulic Lift, 238 to 239, 241
Muffler, 168 to 169
Plug, Oil Pan, 161

Gaskets (continued)

- PTO Shaft Housing, 206
- Pump, Hydraulic, 238
- Rear Seal Retainer, Engine, 144
- Steering Gear Housing, 213
- Transmission, 201, 203
- Water Pump, 163

Gauges

- Ammeter, 188
- Cable, Tachometer, 161
- Fuel, 189
- Oil Level Indicator, Engine, 160
- Oil Level Indicator, Hydraulic, 160
- Pressure, Engine Oil, 189
- Proofmeter, 161
- Tachometer, 161, 188
- Temperature Sending Unit, 189
- Temperature, Water, 189
- Voltmeter, 188

Gear

- Camshaft, Engine, 144
- Crankshaft, Engine, 144
- Oil Pump, 145, 147
- Pump, Hydraulic, 238
- Set, Steering Sector, 212
- Shift Knob, 199
- Shift Seal, 199
- Spider, Differential, 202 to 203
- Starter Ring, 182
- Three Point Leveling Box, 228
- Transmission, 199
- Transmission Sliding, 199

Generator, 184

- Bearing, 184
- Belt, 162
- Brush, 182, 184
- Cut-out, 183
- Kit, Repair, 184
- Tach Drive, 184

Governor, 153

- Bearing, 153
- Parts, 151 to 153, 176
- Repair Kit, 153
- Shaft, 153

Grassboard, Sickle Mower, 265

Grease Fitting, Mower Pitman Cap, 264

Grease Gun, 280

- Hose, 280
- Pipe, 280

Grill, 272

Grommet, Steering Column, 213

Guard

- Bolt, Sickle, 264, 279
- Sickle, 262

H

Hair Pins, 237

Handle

- Hood, 274
- Hydraulic Valve, 249 to 250, 258
- Kit, Valve, 258
- Three Point Leveling Box, 228

Hanger, Flail Blade, 266

Hanger, Swinging Drawbar, 236

Hardener, Paint, 281

Hardware

- Roll Pin, 210
- Washers, 167

Head, Cylinder, 148

Head, Sickle, 262

Heater, Engine Block, 167

Hinge, Hood, 273 to 274

Hitch Pins, 231, 236

Hold Down, Sickle Knife, 264

Hood, Engine, 273 to 274

Hood

- Bolt, 273
- Decals, 275
- Emblem, 275
- Handle, 274
- Hinge, 273 to 274
- Pad, 166
- Side Panel, 273 to 274

Hose

- Air Cleaner, 159
- Clamp, 167
- Grease, Gun, 280
- Hydraulic Assembly, 246 to 248, 253, 255 to 256, 258
- Radiator, 167
- Steering, Power, 217

Hub

- Cap, 225
- Hydraulic Pump, 243, 245
- PTO Drive Clutch, 208
- Seal, Front Grease, 225
- Wheel, 224 to 225, 243, 245

Hydraulic

- Adaptor, 247, 249 to 250
- Adaptor, Coupler, 247
- Back Up Washer, Lift Piston, 239
- Bearing, Pump, 238
- Block, Pump Cam, 237
- Bolt, Adaptor Plate, 249 to 250
- Bolt, Valve Handle, 249 to 250
- Box, Valve Mount, 253, 255 to 257
- Bracket, Hose Coupler, 248
- Bracket, Pump Mount, 242
- Bracket, Valve Handle, 258
- Bushing, Pump, 237
- Bushing, Pump Drive, Crankshaft Pulley, 141
- Capscrew, Valve Handle Mounting, 249 to 250
- Chamber Kit, Pump, 237
- Clamp, Coupler, 247 to 248, 253
- Closed Center Plug, Valve, 258
- Coupler Kit, 247

Hydraulic (continued)

Coupler, Pump Drive, 241, 243
 Coupler, Pump Shaft, 244
 Couplers, Female, 247 to 248, 253
 Couplings, Crimp, 249 to 250
 Cover, Coupler Dust, 248
 Cylinder, 246
 Cylinder, Side Link, 255 to 256, 259 to 260
 Cylinder, Three Point Lift, 239
 Cylinder, Top Link, 255 to 256, 261
 Detent, Valve, 258
 Fitting, Banjo Bolt Hose, 249 to 250
 Flange, Pump Drive, 243
 Gasket, Lift, 238 to 239, 241
 Gasket, Lift Cylinder, 241
 Gasket, Pump, 238
 Gear, Pump, 238
 Handle Kit, Valve, 258
 Handle, Valve, 249 to 250
 Hose Assembly, 246 to 248, 253, 255 to 256
 Hub, Pump Drive, 243, 245
 Kit, Cylinder Repair, 246
 Kit, Cylinder Seal, 246
 Kit, Pump Repair, 237
 Kit, Remote Adapter, 253, 255, 257
 Kit, Top and Side Link Cylinder Seal, 261
 Kit, Top and Tilt, 255 to 256
 Kit, Valve, 248, 250 to 254, 259
 Kit, Valve Spool Return, 258
 Knob, Valve Handle, 258
 Mount, Valve, 248, 250
 Nut, Valve Handle, 249 to 250
 O-Rings, 154, 178, 201, 205, 208, 238 to 241, 249 to 250
 Oil Dipstick, 160
 Packing, Cylinder, 246
 Pin, Valve Handle, 249 to 250
 Piston, Lift, 237, 239
 Piston, Three Point Lift, 239
 Plate, Adaptor, 253, 255 to 257
 Plate, Hydraulic Lift Control, 241
 Plug, Coupler Dust, 247, 253
 Power Beyond Plug, Valve, 258
 Pumps, 242
 Rings, Three Point Lift Piston, 239
 Rod, Valve Handle Pivot, 249 to 250
 Seal Kit, Valve, 258
 Seal, Cylinder, 246, 261
 Shaft, Pump, 238, 243 to 244
 Shaft, Pump Drive, 244
 Stop, Quadrant Lever, 239
 Tips, Male, 247
 Valve, 239, 248, 250, 253, 255 to 256, 259
 Valve, Pump Control, 239
 Valve, Pump Relief, 239

I

Ignition Coil, 175
 Ignition Kit, Electronic, 174

Implement PTO Yoke, 268
 Injector Nozzle Tip, 157
 Instrument Panel Bolt, 193

J

Jar, Air Intake, 157

K

Key, Ignition Switch, 178
 Kits
 Alternator Conversion, 185 to 186
 Axle Nut and Snap Ring, Rear, 204
 Brake Repair, 194
 Bushing, Front Spindle, 223
 Clutch, 195
 Coupler, Hydraulic, 247
 Cylinder Seal, 246
 Electronic Ignition, 174
 Engine, See page XVI to IXX for complete application listing, 1 to 51, 65 to 140
 Generator Repair, 184
 Hydraulic Cylinder Repair, 246
 Hydraulic Lift Cover Repair, 239
 Hydraulic Pump Repair, 237
 Hydraulic Remote Adapter, 253, 255, 257
 Ignition Tune-Up, 174
 Steering Seal, 213, 215 to 216
 Top and Side Link Cylinder Seal, 261
 Top and Tilt, Hydraulic, 255 to 256
 Transmission Bearing and Seals, 200
 Valve Spool Return, Hydraulic, 258
 Valve, Hydraulic, 248, 250 to 254, 259
 Knife Clip, 264
 Knife, Sickle, 262
 Knob
 Choke, 151
 Hydraulic Valve Handle, 258
 Light Switch, 179
 Transmission Gear Shift, 199
 Transmission Shifter, 199
 Knuckle, Three Point Leveling Box, 228

L

Latch, Battery Door, 273
 Lens, Light, 192
 Leveling Box Assembly, Three Point, 228
 Lever, Sickle Pitman, 264
 Lift Arm, Three Point, 230
 Lift Cover Repair Kit, 239
 Light, 189, 191 to 192
 Bolt, Tail Light, 191
 Bracket, 179, 191 to 192
 Bulb, 189, 191
 Bulb Retainer, 192
 Clip, 192
 Clip, Rim Retainer, 192
 Lens, 192
 Rim, Bulb Retainer, 189
 Ring, 192

Spacer, Fender Bracket, 192
 Tail, 191
 Warning, 192
 Lighter, Cigar, 192
 Linch Pin, 233, 237
 Lining, Brake, 194
 Link, Flail Blade, 266
 Lower Link Pins, 231, 236
 Lug Bolt, 226

M

Manifold, 168
 Manifold Nut, 167
 Mower Parts
 Bearing, Flail Mower, 269
 Bearing, Rotary Cutter Blade Shaft, 266
 Blade, Flail, 266 to 267
 Blades, Rotary Cutter, 266
 Blades, Sickle, 262
 Bolt, Guard, 264, 279
 Bolt, Sickle Guard, 264, 279
 Clip, Knife, 264
 Cover, Pitman Bearing, 264 to 265
 Grassboard, 265
 Grease Fitting, 264
 Guards, Disc Mower, 262
 Guards, Sickle Mower, 262
 Hanger, Flail Blade, 266
 Head, Sickle, 262
 Head, Sickle Knife, 262
 Hold Down, Knife, 264
 Knives, Sickle, 262
 Lever, Pitman, 264
 Link, Flail Blade, 266
 Nut, Rotary Cutter Blade Bolt, 266, 279
 Nut, Sickle Guard, 264, 279
 Pitman Box, 264
 Pitman Wood, 264 to 265
 Plate, Wear, 263 to 264
 Ring, Rivet Vise Retainer, 263
 Rivet, Sickle, 263
 Seal, Oil, 264 to 265
 Section, Sickle, 262
 Slip Clutch, 266
 Spacer, Rotary Cutter Blade Bolt, 266
 Spring, Pitman Stick, 264
 Strap, Pitman, 264
 Vise, Sickle Section Rivet, 263
 Washer, Sickle Guard, 279
 Muffler Bolt, 169
 Mufflers, 169 to 170

N

Needle & Seat, Carburetor, 150
 Nozzle, Fuel Injector, 157
 Nozzle, Injector, 157
 Nut, Light Switch, 178 to 179
 Nut, Manifold, 167

Nut, Muffler, 167, 169

Nut

Clamp, Drag Link, 220
 Connecting Rod, Engine, 141
 Differential Lock, 202
 Differential Ring Gear, 203
 Hydraulic Valve Handle, 249 to 250
 Lock, Wheel Clamp, 204, 225
 Rear Axle, 204
 Rear Wheel, 226, 279
 Rotary Cutter Blade Bolt, 266, 279
 Sickle Guard, 264, 279
 Steering Wheel, 211
 Steering Wheel Acorn, 211
 Wheel, 225 to 226

O

O-Rings, 154, 178, 240
 Clutch, PTO Drive, 208
 Cover, Hydraulic Lift, 238, 241
 Housing, Axle to Center, 205
 Kit, Hydraulic Pump, 238
 Kit, Lift Cover, 240
 Kit, Valve Mounting, 249 to 250
 Piston, Hydraulic Lift, 239
 Transmission, 201

Oil Pump

Body, 145
 Bushing, 145
 Engine, 146 to 147
 Gear, 145, 147
 Kit, Repair, 145
 Shaft, 147

Oil

Filler Cap, 160
 Filter, Engine, 159 to 160
 Level Indicator, 160
 Level Indicator Tube, Engine, 161
 Pressure Gauge, 189
 Pump Repair Kit, 238
 Over-Running Coupler, 210

P

Packing, Hydraulic Cylinder, 246
 Packing, Steering Pinion Shaft, 212
 Pad, Hood, 166
 Pad, Radiator Hood, 166
 Paint

Aluminum, 280 to 281
 Black, 280 to 281
 Hardener, 281
 OEM Colors, 280 to 281
 Primer, 281
 White, 280 to 281

Panel, Hood Side, 273 to 274

Pickup Teeth, Rake, 267

Pin

Anchor, 234

Pin (continued)

Drawbar, 231, 236
 Drawbar Clevis, 236
 Front Axle Pivot, 218
 Hair, 237
 Hitch, 231, 236
 Hydraulic Valve Handle, 249 to 250
 Linch, 233, 237
 Lower Link, 231, 236
 Lower Link Support, 230
 PTO Lock, 206
 Radius Rod, 218
 Rocker, Hydraulic Lift, 239
 Roll, 210
 Stabilizer, 233 to 234
 Sway Chain Clevis, 235
 Three Point Leveling Box, 228
 Top Link, 232, 239
 Yoke, Three Point Lift, 239
 Pipe, Exhaust, 170, 172 to 173
 Pipe, Grease Gun, 280
 Piston, Engine 1939 to 1964, 55
 Piston, Hydraulic Lift, 237, 239
 Piston, Three Point Lift, 239
 Pitman
 Box, Sickle Mower, 264
 Lever, 264
 Wood, 264 to 265
 Planter Parts
 Bearing, 269
 Tire, 269
 Plate
 Adaptor, Hydraulic, 253, 255 to 257
 Data, 271
 Hydraulic Lift Control, 241
 Sickle Wear, 263 to 264
 Plug
 Engine Oil Drain, 161
 Hydraulic Coupler Dust, 247, 253
 Oil Pan, 161
 Transmission Drain, 201
 Points, Distributor, 175 to 177
 Power Beyond Plug, Hydraulic Valve, 258
 Pressure Plate, 196
 Primer, 281
 Proofmeter, 161
 PTO
 Adaptor, Shaft, 210
 Bearing, Shaft, 206 to 207
 Clutch Disc, 197
 Collar, Shaft Seal Retaining, 205
 Coupler, Over-Running, 210
 Cover, 206
 Cross & Bearing Kit, 266 to 267
 Disc, 209
 Disc, Friction, 209
 Gasket, Shaft Housing, 206
 Hub, Drive Clutch, 208

PTO (continued)

Pin, Lock, 206
 Plate, Clutch, 207, 209
 Ring, Clutch Piston, 210
 Roll Pin, Over-Running Coupler, 210
 Seals, 206
 Shaft, 205 to 207
 Shaft, Conversion, 205
 Sleeve, Shaft, 207
 Sleeve, Shaft Retainer, 205
 Snap Ring, Bearing Retainer, 206
 Snap Ring, Shaft Bearing, 207
 Spring, Feathering, 208
 Yoke, Implement, 268
 Yoke, Tractor, 268
 Pulley, Alternator, 184, 186 to 187
 Pulley, Crankshaft, 141, 245
 Pumps
 Body, Oil Pump, 145
 Cam Block, Hydraulic, 237
 Chamber Kit, Hydraulic, 237
 Coupler, Hydraulic Drive, 243
 Engine Oil, 146 to 147
 Flange, Hydraulic Drive, 243
 Fuel Lift, 156
 Gear, Engine Oil, 145, 147
 Hydraulic, 242
 Hydraulic Repair Kit, 237
 Kit, Engine Oil, 145
 Seal, Hydraulic Shaft, 238
 Shaft, Hydraulic, 238, 243 to 244
 Shaft, Hydraulic Drive, 244
 Steering, Power, 216
 Water, Engine, 163
 Water, Repair Kit, 163
 Push Rod, Engine, 142

R

Radiator, 165
 Cap, 166
 Drain, 166
 Hood Pad, 166
 Hose, 167
 Shell, 273
 Rain Cap, Exhaust, 173
 Rake Teeth, 267
 Reamer, Engine Oil Pump Repair, 144
 Rear Axle Seal, 204 to 205
 Relief Valve, Pump, 239
 Resistor, Distributor Coil, 176, 178, 185
 Retainer, Spark Plug Wire, 179
 Retainer, Steering Gear Dust Seal, 213
 Rim
 Clamp, Rear, 227
 Light, 192
 Wheel, Front, 226
 Wheel, Rear, 226 to 227
 Ring Gear, Starter, 182

Ring, Rivet Vise Retainer, 263
 Rings, Engine Piston, 1939 to 1964, 56
 Rivet, Sickle, 263
 Rocker Arm, Engine, 142
 Rod
 Choke, 151
 End, Steering Cylinder, 214
 Lift Leveling, 229
 Pivot, Hydraulic Valve, 249 to 250
 Steering Cylinder, 215
 Rotor, Distributor, 175 to 177
 Running Board, 271

S

Screen, Fuel, 154
 Screw
 Air Intake Funnel, 159
 Data Plate, 271
 Throttle Plate, 193
 Seals
 Air Cleaner, 158
 Axle, 205
 Axle, Rear, 204 to 205
 Brake Pedal, 194
 Brake Rod, 195
 Carburetor Throttle Shaft, 152
 Crankshaft, Front, 143
 Cylinder, Hydraulic, 246
 Engine, Front Crankshaft, 143
 Gear Shift, 199
 Housing, Main Drive, 265
 Hub, Front, 224
 Kit, Injector, 157
 Oil, Lip Type, 270
 PTO, 206
 Pump, Water, 163
 Shaft, Hydraulic Pump, 238
 Shaft, Steering Gear Rocker, 212
 Shaft, Steering Gear Sector, 212
 Sleeve, Speedi, 143, 205
 Spindle, Front, 225
 Steering Column, 213
 Transmission, 201
 Transmission Gear Shift, 199
 Valve, Hydraulic, 258
 Seats
 Armrests, 283
 Backrests, 282
 Belt, safety, 283
 Bumper, Spring, 283
 Clip, Spring, 283
 Cover, Backrest, 282
 Cover, Cushion, 282 to 283
 Cushions, 282 to 283
 Spring, suspension, 239
 Section, Sickle, 262
 Sector, Steering, 212
 Sediment Bowl Assembly, 154

Sending Unit, Fuel Tank, 155
 Shaft
 Carburetor Choke, 152
 Carburetor Throttle, 152
 Conversion, PTO, 205
 Distributor, 177
 Drive, Hydraulic Pump, 244
 Hydraulic Pump, 238, 243 to 244
 Leveling Three Point, 228 to 229
 Oil Pump, 147
 PTO, 205 to 207
 Steering, 212, 218
 Three Point Leveling Pinion, 229

Sheet Metal

Bolt, Air Cleaner Door, 159
 Bolt, Battery Cover, 183
 Bolt, Bumper, 271
 Bolt, Fender Bracket, 278
 Bolt, Hood, 273
 Bolt, Instrument Panel, 193
 Bolt, Running Board, 271
 Box, Battery, 183
 Bracket, Bumper, 271
 Bracket, Emblem, 275
 Bracket, Fender, 278
 Bracket, Running Board, 271
 Bumper, Rubber Hood, 273 to 274
 Bumpers, 271
 Clip, Radiator Grill, 272
 Door, Air Cleaner, 273
 Door, Battery, 273
 Emblem, Hood, 275
 Fender, 278
 Funnel, Air Intake, 273
 Grill, 272
 Handle, Hood, 274
 Hinge, Hood, 273 to 274
 Hood, 273 to 274
 Latch, Battery Door, 273
 Pad, Hood, 166
 Panel, Side, 273 to 274
 Plate, Data, 271
 Running Board, 271
 Screw, Data Plate, 271
 Screw, Throttle Plate, 193
 Shell, Radiator, 273
 Support, Rubber Hood, 274
 Thumbscrew, Grill, 272
 Tool Box, 271
 Shell, Radiator, 273
 Shoe, Brake, 194
 Shroud, Cooling Fan, 164
 Shut-Off, Fuel Tank, 154
 Sickle
 Clip, Knife, 264
 Guard Bolt, 264, 279
 Head, 262
 Knife, 262

Sickle (continued)

Nut, Guard, 264, 279

Repair Vise, 263

Rivet Vise, 263

Rivets, 263

Sections, 262

Strap, Pitman, 264

Washer, Guard, 279

Wear Plate, 263 to 264

Wood, Pitman, 264 to 265

Sleeve & Piston Assembly 1939 to 1964, 52 to 53

Sleeve and Piston Kits, 52 to 53

Sleeve, Engine 1939 to 1964, 54

Sleeve, Seal, 143

Sleeve

Engine, 54

PTO Shaft, 207

Retainer, PTO Shaft, 205

Seal, 205

Slip Clutch, 266

Slip Clutch Disc, 266

Snap Ring

Bearing, PTO Shaft, 207

Rear Axle, 204

Retainer, PTO Bearing, 206

Solenoid, Fuel Shut-Off, 156

Solenoid, Starter, 181

Spacer, Front Axle Support Pin, 218

Spacer, Rotary Cutter Blade Bolt, 266

Spark Plug Wire Retainer, 179

Spark Plug Wires, 179

Spark Plugs, 175

Spindle, Front Axle, 223

Spinner, Steering Wheel, 211

Spring

Air Cleaner, 158

Brakes, 195

Governor, 151, 153

Nozzle, Carburetor, 152

Pitman Stick, 264

PTO Feathering, 208

Retainer, Lift Arm Ball, 230

Return, Carburetor Choke, 152

Steering Column, 213

Suspension, 239

Valve, Carburetor Choke Poppet, 152

Stabilizer

Chain, Three Point Hitch, 235

Pins, 233 to 234

Three Point, 233 to 234

Starter, 180

Bolt, Ring Gear, 203

Bushing, 184

Drive, 182

Gasket, Switch, 180

Repair Kit, 182

Ring Gear, 182

Solenoid, 181

Switch, 180

Steering

Arm, 211

Axle, Front, 219

Bearing, Spindle Thrust, 223

Bearing, Steering Gear Thrust, 214

Bearings, 212

Bolt, Drag Link Clamp, 220

Bushing Kit, Front Spindle, 223

Bushing, Column, 212 to 213

Bushing, Gear Rocker Shaft, 214

Bushing, Gear Sector, 212

Bushing, Spindle, 223

Cap, Steering Wheel, 211, 213

Caps, Power Steering Filler, 216

Cover, Drag Link Dust, 220

Cylinder, 214

Drag Link, 219

Drag Link End, 219, 221

Dust Cover, Tie Rod Ends, 220

Filters, 216

Gasket, Gear Housing, 213

Gear Set, 212

Grommet, Steerig Column, 213

Hose, Power, 217

Nut, Drag Link Clamp, 220

Nut, Steering Wheel, 211

Nut, Steering Wheel Acorn, 211

Packing, Pinion Shaft, 212

Pumps, 216

Retainer, Gear Dust Seal, 213

Rod End, Cylinder, 214

Rod, Cylinder, 215

Seal Kit, 213, 215 to 216

Seal, Steerig Column, 213

Seal, Steering Gear Sector Shaft, 212

Seal, Steering Sector, 212

Sector, 212

Shaft, Steering Wheel, 212, 218

Spindle, Front, 223

Spinner, Steering Wheel, 211

Spring, Steerig Column, 213

Tie Rod Ends, 219, 221

Washer, Steerig Column, 211, 213

Wheel, 211

Stop, Hydraulic Quadrant, 239

Stop, Power Adjust Wheel, 227

Strainer, Fuel, 152

Strap, Pitman, 264

Stud, Brake Support Plate, 195

Stud, Wheel, 225

Support, Rubber Hood, 274

Swinging Drawbar, 236

Switch

Boot, Starter, 189

Gasket, Starter, 180

Ignition, 178 to 180

Knob, Light Switch, 179

Switch (continued)

- Nut, 178 to 179
- Safety, Limit, 180
- Starter, 180

T

- Tach Drive, 184
- Tachometer, 161, 188
- Tachometer Cable, 161 to 162
- Tank, Fuel, 155
- Tappet, Engine Valve, 143
- Teeth, Rake, 267
- Temperature Sending Unit, 189
- Thermostats, 166
- Three Point Hitch
 - Arm, Drawbar Stay, 235
 - Arm, Lower Lift, 230
 - Arm, Stabilizer, 233
 - Ball, Lift Arm, 230 to 232
 - Ball, Top Link, 232
 - Bearing, Leveling Box Thrust, 228
 - Bracket, Stabilizer, 233, 235
 - Bushing, Lift Shaft, 239
 - Bushing, Link Pin Adaptor, 230, 232
 - Bushing, Pin Reducer, 230
 - Bushing, Top Link, 232
 - Cylinder, Lift, 239
 - Drawbar, 235 to 236
 - End, Lift Arm Repair, 231
 - Eyebolt, Sway Chain, 235
 - Eyelet, Sway Chain, 235
 - Fork, Leveling, 229
 - Gear, Leveling Box, 228
 - Handle, Leveling Box, 228
 - Kit, Lift Cover Repair, 239
 - Knuckle, Leveling Box, 228
 - Leveling Box, 228
 - Leveling Box Assembly, 228
 - Pin, Anchor, 234
 - Pin, Hair, 237
 - Pin, Hydraulic Lift Rocker, 239
 - Pin, Leveling Box, 228
 - Pin, Lift Yoke, 239
 - Pin, Lower Link, 231, 236
 - Pin, Lower Link Support, 230
 - Pin, Stabilizer, 233 to 234
 - Pin, Sway Chain Clevis, 235
 - Pin, Top Link, 232, 239
 - Piston, Hydraulic Lift, 237, 239
 - Piston, Lift, 239
 - Rings, Lift Piston, 239
 - Rod, Leveling, 229
 - Seal, Top and Side Link Cylinder, 261
 - Seat, Draft Control Spring (Felt), 239
 - Shaft, Leveling, 228 to 229
 - Shaft, Leveling Pinion, 229
 - Spring, Lift Arm Ball Retainer, 230
 - Stabilizer, 233 to 234

Three Point Hitch (continued)

- Stabilizer Chain, 235
- Top Link, 231
- Washer, Lift Piston Back Up, 239
- Washer, Lock, Lift Shaft, 239
- Washer, Stabilizer Lock, 279
- Throttle Plate Screw, 193
- Thumbscrew, Grill, 272
- Tie Rod Ends, 219, 221
- Tire, Planter, 269
- Tool Box, 271
- Tools
 - Grease Gun, 280
 - Hose, Grease Gun, 280
 - Oil Pump Repair, Engine, 144
 - Pipe, Grease Gun, 280
 - Sickle Repair, 263
- Top Link Pins, 232, 239
- Top Link, Three Point, 231
- Tractor PTO Yoke, 268
- Transmission
 - Ball, Shifter, 199
 - Bearing, 200, 202
 - Bearing, Differential Pinion, 202
 - Bolt, Differential Ring Gear, 203
 - Boot, Gear Shift, 199
 - Clutch, 197
 - Countershaft, 199
 - Cover, 200
 - Cover, Clutch, 196
 - Cover, PTO, 206
 - Disc, Clutch, 194, 197
 - Disc, PTO Clutch, 197
 - Disc, PTO Friction, 209
 - Gaskets, 201, 203
 - Gaskets, Differential, 201, 203
 - Gear, 199
 - Gear, Differential Spider, 202 to 203
 - Gear, Sliding, 199
 - Kit, Bearing and Seal, 200
 - Kits, Clutch, 195
 - Knob, Gear Shift, 199
 - Knob, Shifter, 199
 - Nut, Differential Lock, 202
 - Nut, Differential Ring Gear, 203
 - Pinion, Differential, 202
 - Plate, Friction, 209
 - Plate, PTO Clutch, 207, 209
 - Plug, Drain, 201
 - Ring Gear, Differential, 202
 - Seal, Gear Shift, 199
 - Seals, 201
 - Shaft, PTO, 205 to 207
 - Shaft, PTO Conversion, 205
 - Washer, Spider Gear Thrust, 202 to 203
- Tube, Air Cleaner, 158
- Tube, Engine Oil Level Indicator, 161

U

U-Joint, PTO Shaft, 266 to 267

V

Valve Tappet, Engine, 143

Valve

Control, Hydraulic Pump, 239

Engine Overhaul Kit, 59

Exhaust, Engine, 58

Hydraulic, 239, 248, 250, 253, 255 to 256, 259

Intake, Engine, 58

Relief, Hydraulic Pump, 239

Shut-off, Fuel, 154

Shut-off, Fuel Tank, 154 to 155

Venturi, Carburetor, 152

Vise, Sickle Section Rivet, 263

Voltage Regulator, 184 to 186, 188 to 189

Voltmeter, 188

W

Warning Light, 192

Washer

Axle, Rear, 204

Carburetor, 151

Cultivator, 269

Guard, Sickle, 279

Lift Piston Back Up, 239

Lock, Hydraulic Lift Shaft, 239

Lock, Muffler, 169, 279

Rim, Rear, 226

Stabilizer Pin Lock, 279

Steering Column, 211, 213

Thrust, Differential Spider Gear, 202 to 203

Water Pump, 163

Gaskets, 163

Repair Kit, 163

Seals, 163

Water Temperature Gauge, 189

Weather Cap, Exhaust, 173

Wheel

Bearings, Front, 224

Bearings, Implement, 269

Bolt, Rear Rim, 226

Bolt, Rear Wheel, 226

Cap, Hub, 225

Clamp, Rear, 227

Disc, Rear, 227

Front, 226

Hub, 224 to 225, 243, 245

Nut, 225 to 226

Nut, Clamp Lock, 204, 225

Nut, Rear Wheel, 226, 279

Rear, 226 to 227

Rim, Rear, 226 to 227

Steering, 211

Stop, Power Adjust, 227

Stud, 225

Washer, Rear Rim, 226

Wire Harness, 179, 185

Wires, Spark Plug, 179

Y

Yokes, Implement, 268

Yokes, Tractor, 268